

Fulflo® Advantage™ Filter Cartridges

■ Polypropylene

Pleated Series


Absolute Rated High Efficiency From All-Polypropylene Pleated Cartridges

Fulflo® Advantage™ Cartridges, made of pleated polypropylene microfiber, provide high efficiency and high purity filtration. The high submicron efficiency of the Advantage line makes it an ideal membrane prefilter or cost-effective alternative to membrane cartridges in a wide range of applications.

Advantage Pleated Cartridges are available in 0.3µm, 0.6µm, 1.2µm, 2.5µm, 5µm, 10µm, 20µm, 40µm and 70µm absolute rated pore sizes (99.99% removal; $\beta = 10,000$).

Applications


- Chemicals
- Electronic
- Food & Beverage
- Magnetic Media
- Pharmaceuticals
- Cosmetics
- Medical
- Photographic

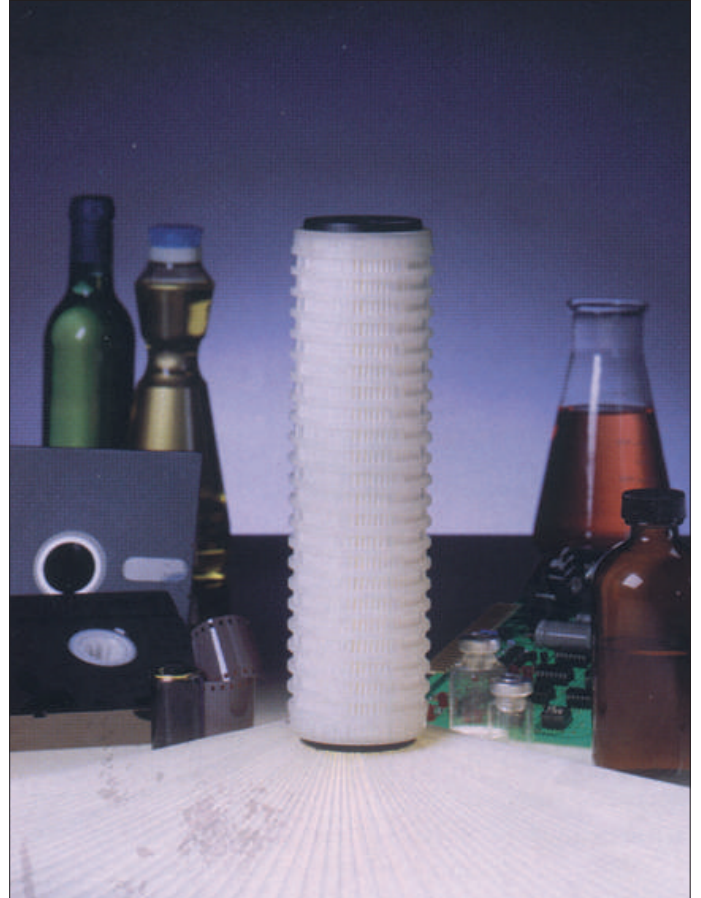

Features and Benefits

- All-polypropylene media and construction meet a broad range of performance requirements.
- One-piece fused construction is 100% bonded for maximum cartridge integrity.
- High surface area design provides superior flow rates and extended service life.
- All media and structural components comply with biological, USP XXI Class VI requirements for plastic and are nontoxic per WI-38 Human Cell Cytotoxicity Test.
- All materials of construction are FDA listed as acceptable for potable and edible liquid contact according to CFR Title 21.
- Fixed pore construction provides ultimate particle retention efficiency.
- Major end seal options are available to fit most housing requirements.
- Advantage cartridges are non-fiber releasing.

Process Filtration Division

 **WARNING! FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.** This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalogue. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection for the products and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

Parker
Filtration

Pleated Series

Specifications

Filtration Ratings:

- 99.99% at 0.3µm, 0.6µm, 1.2µm, 2.5µm, 5µm, 10µm, 20µm, 40µm and 70µm pore sizes

Materials of Construction:

- Type of Construction: integrally sealed, all-polypropylene pleated media supported by all-polypropylene construction
- Filter Media: composite, spunbonded/melt blown continuous polypropylene microfiber matrix
- Pleat Support Layer (Upstream): polypropylene
- Pleat Drainage Layer (Upstream): polypropylene
- Media Support Core: high-strength polypropylene

- Media Protective Cage: molded polypropylene
- Pleat Pack Side Seal: fused polypropylene
- DOE Caps: polypropylene
- SOE Caps/O-Ring Adaptors: polypropylene
- Gaskets (DOE Style): Buna-N, FDA grade (standard)
- O-Rings (SOE Style): silicone, FDA grade (standard)
- Optional Gasket Materials: (non-FDA): EPR, Viton,* silicone
- Optional O-Ring Materials: (non-FDA): EPR, Viton,* Buna-N, Teflon* encapsulated Viton*

Recommended Operating Conditions:

- Maximum Temperature: 200°F (93°C)
- Maximum Temperature @ 35 psid: 160°F (71°C)
- Change Out ΔP: 35 psi (2.4 bar)
- Maximum ΔP @ Ambient 70°F (21°C): 70 psi (4.8 bar)
- Maximum ΔP @ 200°F (93°C): 20 psi (1.4 bar)

Dimensions:

- Overall Length: See catalog sheet C-2090. SOE fits standard housings with O-ring seals.
- Cartridge Outside Diameter: 68.26mm
- Cartridge Inside Diameter: DOE: 2.7 cm SOE: 1.99 cm

Advantage™ Length Factors

Length (mm)	Length Factor
254	1.0
508	2.0
762	3.0
1016	4.0

Advantage Cartridge Flow Factors (m bard – l/min)

Rating (µm)	Flow Factor
0.3	29
0.6	16
1.2	14
2.5	5.4
5	2.2
10	0.4
20	0.4
40	0.2
70	0.1

Liquid Particle Retention Ratings (µm) @ Removal Efficiency of:

Cartridge	β=10000 Absolute	β=1000 99.9%	β=100 99%	β=50 98%	β=20 95%	β=10 90%
AP 003	0.3	<0.3	<0.3	<0.3	<0.3	<0.3
AP 006	0.6	0.5	<0.3	<0.3	<0.3	<0.3
AP 012	1.2	1	0.6	0.4	<0.3	<0.3
AP 025	2.5	2.1	1	0.6	<0.3	<0.3
AP 050	5	3.8	1.4	0.8	0.4	<0.3
AP 100	10	6.6	2	1.1	0.5	<0.5
AP 200	20	12.7	3.1	1.8	0.8	<0.5
AP 400	40	22	5.8	3.2	1.2	0.6
AP 700	70	50	22	15	8	5.2

Flow Rate and Pressure Drop Formulas:

$$\text{Flow Rate (l/min)} = \frac{\text{Clean } \Delta P \times \text{Length Factor}}{\text{Viscosity} \times \text{Flow Factor}}$$

$$\text{Clean } \Delta P = \frac{\text{Flow Rate} \times \text{Viscosity} \times \text{Flow Factor}}{\text{Length Factor}}$$

Beta Ratio (β) =

$$\frac{\text{Upstream Particle Count @ Specified Particle Size and Larger}}{\text{Downstream Particle Count @ Specified Particle Size and Larger}}$$

$$\text{Percent Removal Efficiency} = \left(\frac{\beta-1}{\beta} \right) \times 100$$

Performance determined per ASTM F-795-88. Single-Pass Test using AC test dust in water at a flow rate of 2.5 gpm per 10 in (9.5 lpm per 254mm) cartridge.

Notes:

- Clean ΔP** is m bar differential at start.
- Viscosity** is centistokes. Use Conversion Tables for other units.
- Flow Factor** is Δm bard PT l/min at 1 cks for 254mm (or single).
- Length Factors** convert flow or ΔP from 254mm (single length) to required cartridge length.

Ordering Information

AP	025	10	A	N	DO	01
Cartridge Code	Particle Removal Rating (µm)	Nominal Length (mm)	Support Construction	Gasket/O-Ring Material	End Cap Configurations	Special Options
AP = Advantage Polypropylene	003 = 0.3 006 = 0.6 012 = 1.2 025 = 2.5 050 = 5 100 = 10 200 = 20 400 = 40 700 = 70	254 508 762 1016	A = Heavy-Wall Polypropylene	E = EPR N = Buna-N S = Silicone V = Viton* T = Teflon* Encapsulated Viton*	DO = Double Open End (DOE) DX = DOE With Core Extender SC = 226 O-Ring/Cap SF = 226 O-Ring/Fin TC = 222 O-Ring/Cap TF = 222 O-Ring/Fin	B = 100% Bubble-Point Test 01 = Single Cartridge Packaging No Symbol = No Option

Process Filtration Division

* A trademark of E. I. du Pont de Nemours & Co.

Parker Filtration
Filter Division Europe
Shaw Cross Business Park
Dewsbury, West Yorkshire
WF12 7RD, England
Phone: +44 (0) 1924 487000
Fax: +44 (0) 1924 487001
Website: www.parker.com

